


Post Anchor Installation Instructions

For Installing on Deck/Wood

Step 1 Determine centerline of posts in both projection and width.

Step 2 Make sure post anchor is square to both these directions and mark hole location of post anchor with pencil.

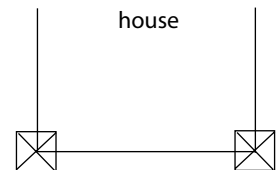


Step 3 Remove anchor and with a 1/4" wood bit, drill a pilot hole into each of the marked 4 holes.

Step 4 Replace the post anchor over these holes and with a bubble level make sure the post anchor is perpendicular to the deck. If not, washers can be used between post anchor and deck to level post anchor in proper direction.

Step 5 Once level, use the 3/8" lag bolts provided to secure into place.

Step 6 Vinyl post, along with post base, can now be slid over anchor. Use a 9/64" drill bit to pilot a hole through predrilled holes of the base bracket into the two walls of the Post Anchor as shown.

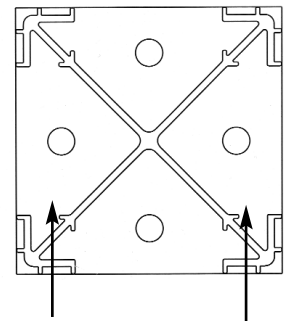

Step 7 Use the 1 1/4" stainless steel screws provided with your vinyl system to secure post base to post anchor. Secure post base to deck using 1 1/4" tapered stainless steel screws provided.

For Installing on Patio/Concrete

Follow Steps 1 & 2 above and then continue

Step 3 Remove the anchor and with the 1/4" masonry bit provided drill at mark a hole into the concrete to a depth of at least 2" (a hammer drill works best for this procedure). Repeat this procedure the remaining 3 holes.

Step 4 Replace the post anchor over these holes and with a bubble level make sure the post anchor is perpendicular to the patio or concrete slab. If not, washers can be used between post anchor and concrete to level post anchor in proper direction.

Step 5 Make sure the nut of the provided concrete anchors is at the top of the threaded anchor and drop them into the holes of the post anchor and drilled concrete.

Step 6 Using a hammer, post anchors can now be driven down into the concrete securing them in place. Tighten down nuts over the anchor.

Follow steps 6 and 7 as above and enjoy your canopies!

